


Quick Installation Guide MultiPlus-II


24V 3000VA 230Vac
 48V 3000VA 230Vac (hw rev 08 and above)
 48V 5000VA 230Vac (hw rev 03 and above)

www.victronenergy.com

Included




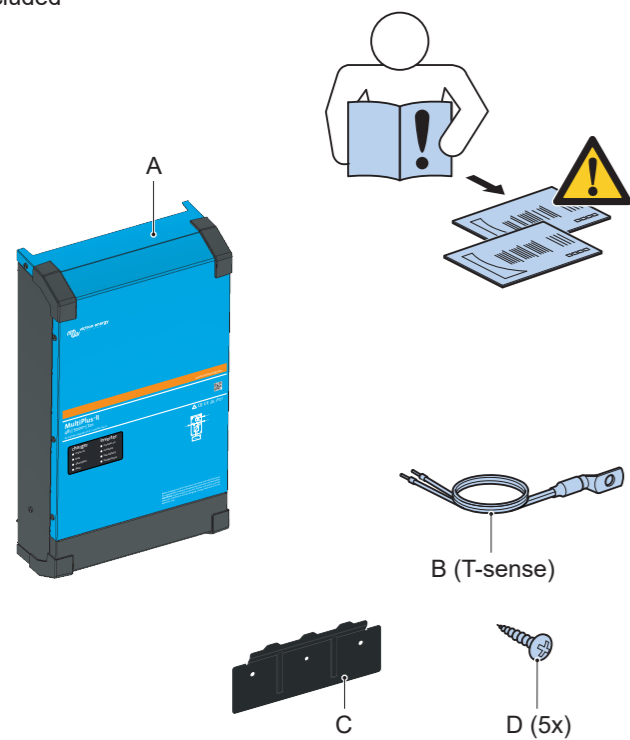


Not included

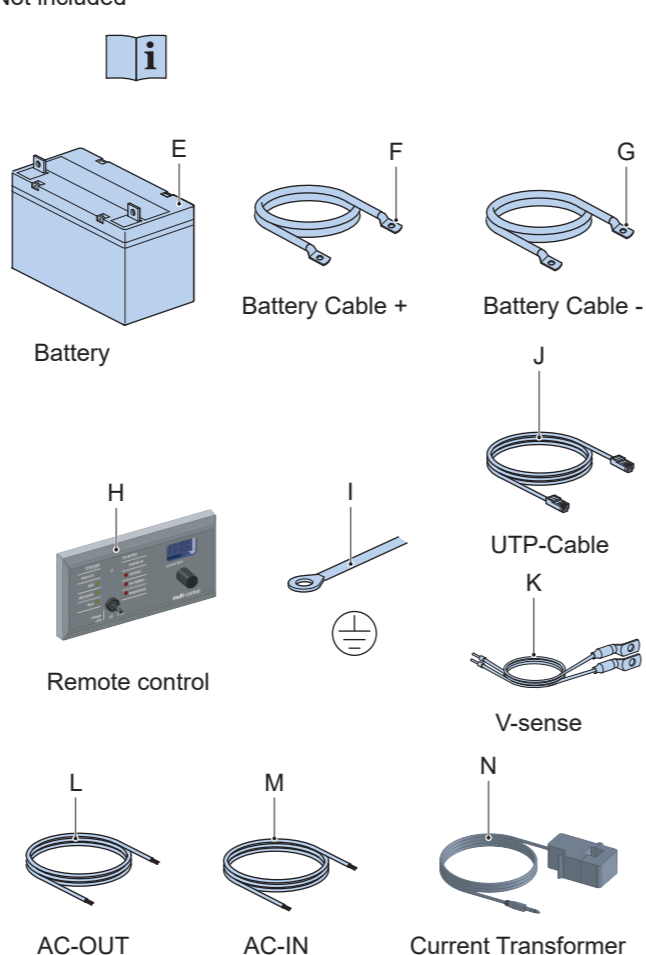

For fuse values:
refer to the user manual

 Fuse (not included)

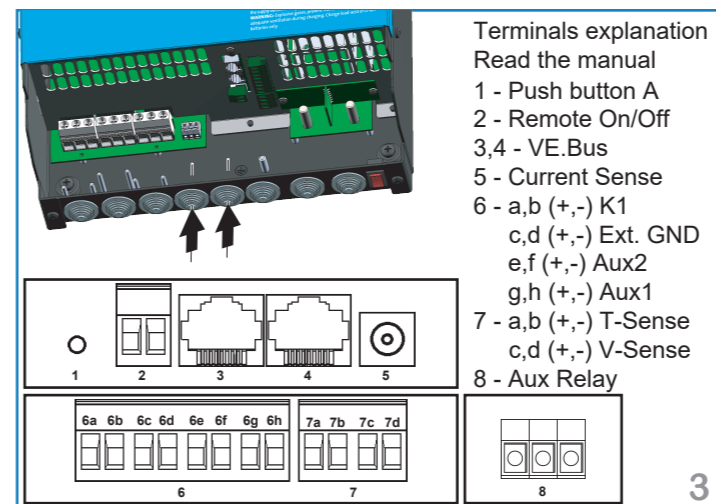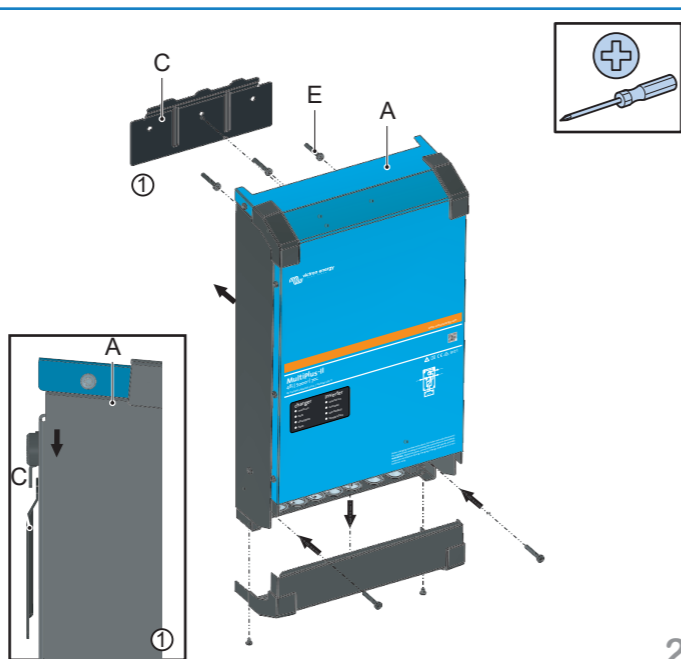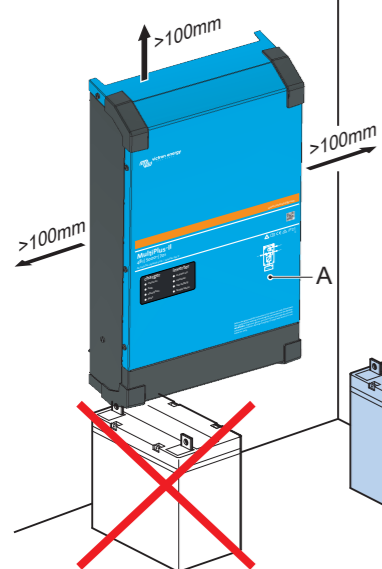

Terminals explanation
 Read the manual
 1 - Push button A
 2 - Remote On/Off
 3,4 - VE.Bus
 5 - Current Sense
 6 - a,b (+,-) K1
 c,d (+,-) Ext. GND
 e,f (+,-) Aux2
 g,h (+,-) Aux1
 7 - a,b (+,-) T-Sense
 c,d (+,-) V-Sense
 8 - Aux Relay

